


ASSEMBLY INSTRUCTIONS
CHANGING TOPPER (RTA)
FOR 3DR. DRESSER
Model #22263

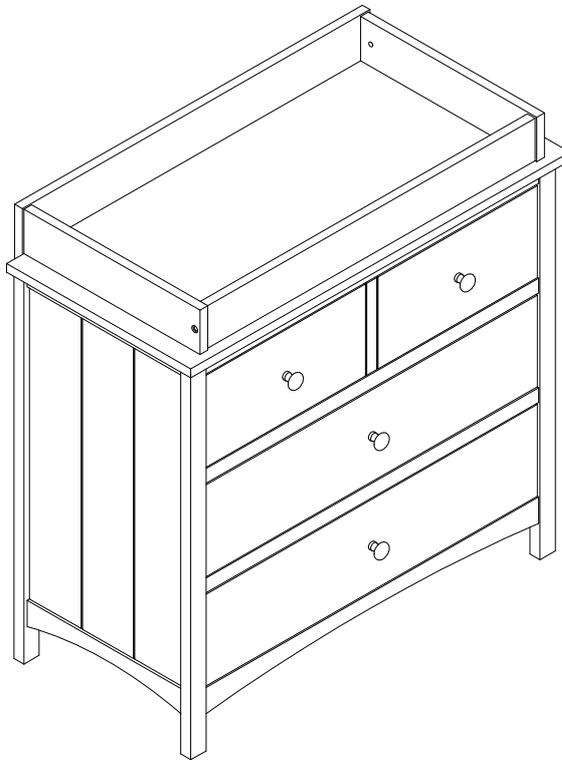

Thank you for your purchase!


Remove all parts and hardware from the box and lay on a carpeted or scratch -free work surface.
Do not dispose of any contents until assembly is completed.

TOOLS REQUIRED:

ALLEN KEY (Included)




SCREW DRIVER (Not Included)

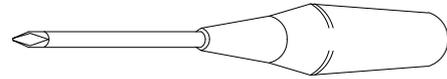


PARTS ENCLOSED IN CARTON


A. Changing Top Front (1 pc)

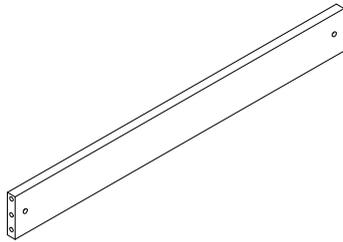


B. Changing Top Back (1 pc)

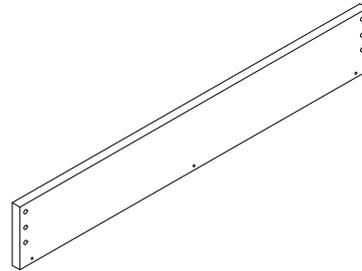

C. Changing Top Left (1 pc)

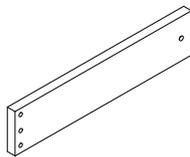


D. Changing Top Right (1 pc)

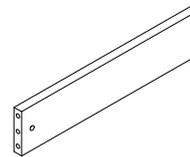

HARDWARE

(E) Allenbolt 2" (50 mm) (4 pcs)

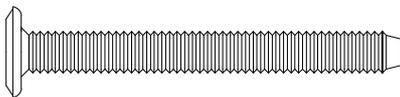

(F) Barrel nut (4 pcs)



(G) Spring washer (4 pcs)



(H) Screw 1-3/8"(35 mm) (3 pcs)



(J) Wood dowel Ø6x30mm (8 pcs)



(K) Allen key (1 pc) (length may vary)



Do not fully tighten all Screws until all parts are in place.



ASSEMBLY OF CHANGING TOPPER

THIS STEP REQUIRES :

- A. Changing top back (1 pc)
- B. Changing top front (1 pc)
- C. Changing top left (1 pc)
- D. Changing top right (1 pc)

(E) Allen bolt 2" (50 mm) (4 pcs)

(F) Barrel nut (4 pcs)

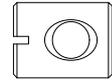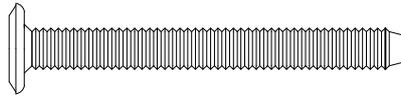

(G) Spring washer (4 pcs)

(K) Allen key (1 pc) (length may vary)

(J) Wood dowel Ø6x30mm (8 pcs)



STEP 1:

Attach Changing Top Left (C) and Changing Top Right (D) to the Changing Top Front (A) using Wood dowel (J). Secure with Allen bolt (E), Spring washer (G) and Barrel but (F) as shown in FIG.1. Tighten with the Allen key (K).


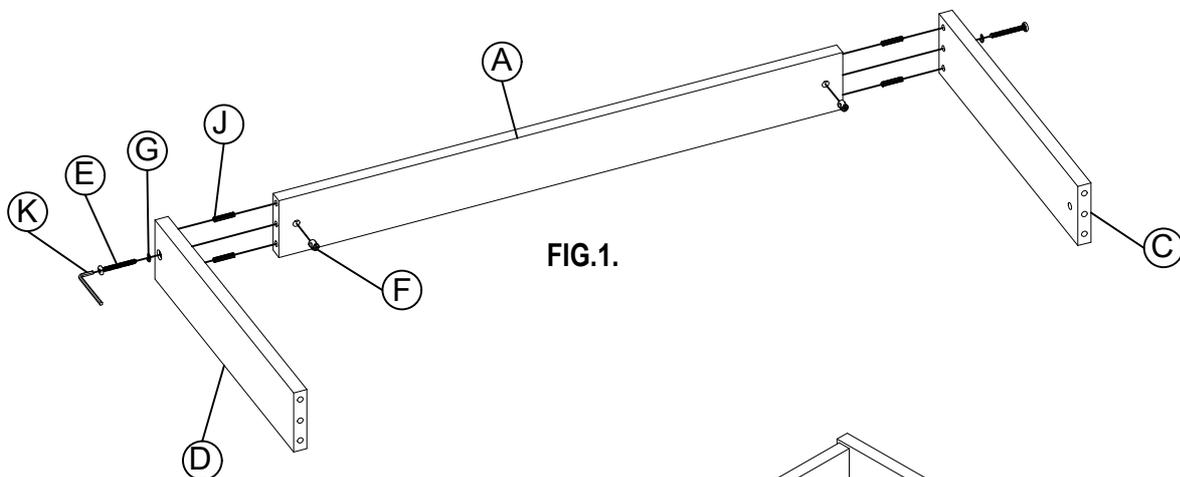


FIG.2.

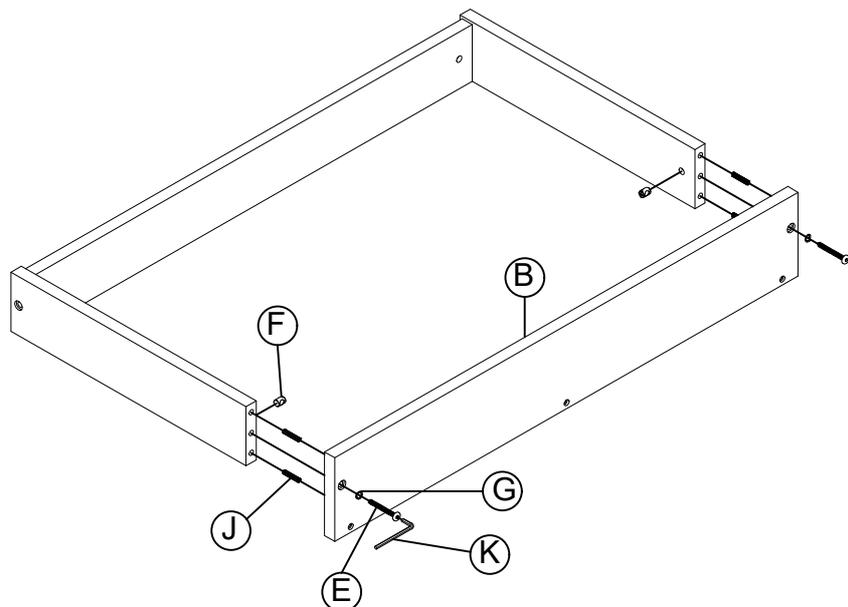


STEP 2:

Attach Changing Top Back (B) to the Right and Left sides using Wood dowels (J). Secure with Allen bolt (E), Spring washer (G) and Barrel nut (F) as shown in FIG.2. Tighten with the Allen key (K).


ASSEMBLY OF CHANGING TOPPER

THIS STEP REQUIRES :

(H) Screw 1-3/8"(35 mm) (3 pcs)

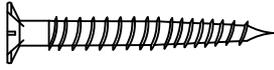

SCREW DRIVER (Not Included)

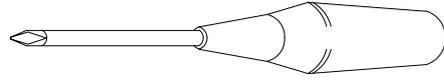

STEP 3:

- Place the changing topper on top of the dresser.
- The holes in back side should be below Dresser top surface. (see diagram)



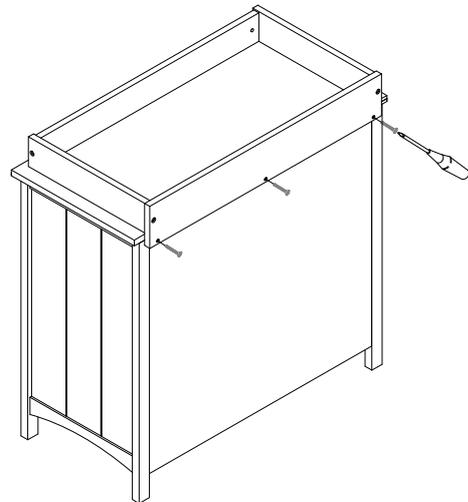


FIG.3.

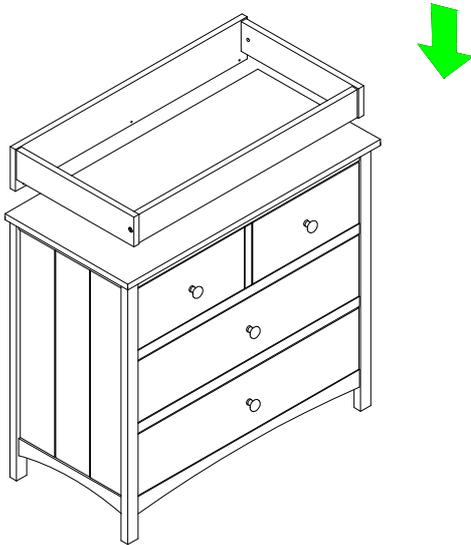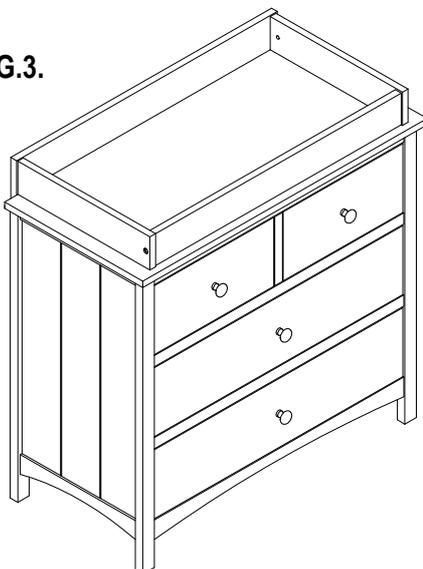

STEP 4:

Insert the screws into the back of the changing topper and dresser, tighten with Screw driver. Check to see that the changing topper is secure. Complete assembly as shown in FIG.3.

 **CAUTION:** ANY PAD USED IN THIS CHANGING TOPPER MUST BE AT LEAST 16 INCHES BY 32 INCHES (41CM X 81CM) WITH A THICKNESS NOT EXCEEDING 1 INCH (2.54 CM).

 **WARNING**
FOR CHANGING TOPPER USE

- READ ALL INSTRUCTIONS BEFORE ASSEMBLING CHANGING TOPPER.

KEEP INSTRUCTIONS FOR FUTURE USE.

- FAILURE TO FOLLOW THESE WARNINGS AND THE ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.
- **CAUTION:** THE PAD INTENDED FOR USE ON THE CHANGING TOPPER SHALL HAVE MINIMUM DIMENSIONS OF 16 INCHES BY 32 INCHES (41 CM X 81 CM) WITH A THICKNESS NOT EXCEEDING 1 INCH (2.54 CM)
- THE MAXIMUM WEIGHT SHALL NOT BE GREATER THAN 30 LB (13.6 KG).
- **DO NOT** USE CHANGING TOPPER IF DAMAGED OR BROKEN.
- PLEASE CLEAN THE CHANGING TOPPER WITH A DRY CLOTH AND USE MILD WOOD POLISH IF REQUIRED.

FALL HAZARD: CHILDREN HAVE SUFFERED SERIOUS INJURIES AFTER FALLING FROM CHANGING TABLES. FALLINGS CAN HAPPEN QUICKLY.

- TO PREVENT DEATH OR SERIOUS INJURY, ALWAYS KEEP CHILD WITHIN ARM'S REACH.
- ALWAYS SECURE THIS CHANGING TOPPER TO THE CHANGING SURFACE BY ATTACHING IT USING THE SCREWS PROVIDED. SEE INSTRUCTIONS.
- THE SURFACE USED SHOULD BE LEVEL, STABLE AND STRUCTURALLY SOUND WITH MINIMUM SURFACE DIMENSIONS OF 34 INCHES (86.36 CM) BY 17.5 INCHES (44.45 CM)